

DFB Interband Cascade Lasers

(ICL): 4600 nm - 5300 nm

nanoplus Distributed Feedback Lasers (**DFB**) are specifically designed for high-precision gas detection using tunable diode laser absorption spectroscopy (**TDLAS**). Our devices operate **reliably** in more than 50,000 installations worldwide. For 25 years nanoplus has set the standard for DFB laser technology and is the only manufacturer routinely providing DFB lasers at **any wavelength**.

Key features:

- MONOMODE
- CONTINUOUS WAVE
- ROOM TEMPERATURE
- MODE HOP FREE TUNING



Our excellent **spectral purity** is characterized by a large side mode suppression ratio **(SMSR)** of **> 35 dB**, giving your system a low signal to noise ratio against crossinterference.



Overgrowth-free DFB device processing

A **narrow linewidth below 3 MHz** guarantees ultra-precise scanning of the absorption line feature. The **high output power** of **several mW** yields a stronger signal and increases your measurement precision.

Fast and wide wavelength tuning is required for in situ systems. Most customers use a scan rate of 10 kHz and benefit from our very large tuning coefficient.

"Do not change your ideas, let us deliver the laser that fits your application."

TO66 with TEC and NTC,

sealed with cap and

AR coated window

We offer **various packaging options**, e.g. several free space housings including TEC and NTC, fiber coupling, **collimation** and **custom designs**. What do you require?

If you require **custom specifications**, please contact us. Nearly 80 % of our devices are more or less customer-specific. As nanoplus is a **fully vertically integrated company**, we control the entire process chain from design to packaging. Both nanoplus production facilities are based in **Germany**. To guarantee consistent product quality we apply a strict and **ISO certified quality management system** at all levels.

Our sales and R&D teams have long-standing experience in developing lasers. They will advise you in your design and realization phase as well as after-sales: **We make market leaders!**



WAVELENGTH

760-830 nm

830-920 nm

920-1100 nm

1100-1300 nm

1300-1650 nm

1650-1850 nm

1850-2200 nm

2200-2600 nm

2600-2900 nm

2800-4000 nm

4000-4600 nm

4600-5300 nm

5300-5800 nm


5800-6500 nm

6000-14000 nm








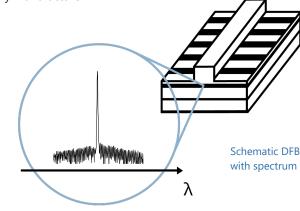




Typical Specifications: 4600 nm - 5300 nm

This data sheet reports performance data of a **sample DFB ICL at 5263 nm**, which is representative for the entire wavelength range. We offer enhanced specifications for 5184 nm and 5263 nm. Please refer to our **TOP Wavelengths** for further details: nanoplus.com/DFB/5184nm5263nm.

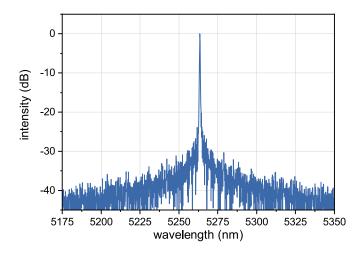

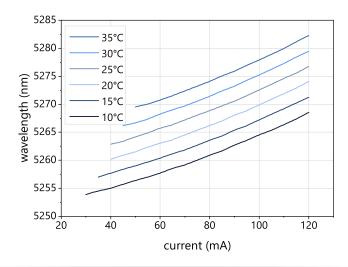

Typical room temperature cw spectrum of a nanoplus DFB ICL at 5263 nm

Typical mode hop free tuning of a nanoplus DFB ICL at 5263 nm by current and temperature

electro-optical characteristics	symbol	unit	min.	typical	max.
operating wavelength (at T_{op} , I_{op})	$\lambda_{\sf op}$	nm		Please specify to 0.1 nm.	
optical output power (at λ_{op})	P_{op}	mW		3	
operating current	l _{op}	mA			120
operating voltage	V_{op}	V		5	
threshold current	I _{th}	mA	30	40	70
side mode suppression ratio	SMSR	dB		> 35	
current tuning coefficient	C _I	nm / mA		0.14	
temperature tuning coefficient	C_{T}	nm / K		0.48	
operating chip temperature	T_{op}	°C	+10	+20	+50
operating case temperature*	T _c	°C	-20	+25	+50
storage temperature*			-30	-20	-70

* non-condensing

packaging

TO66 with TEC and NTC, sealed, AR coated window

Other packaging options may be discussed on request.

Technical drawings & accessories are available at: nanoplus.com/packaging

Please contact <u>sales@nanoplus.com</u> for customized specifications, quotes and further questions. Visit our website for technical notes, application samples or literature referrals.