## Nanosystems and Technologies GmbH Nanoplus

Schematic DFB

with spectrum


λ

## **TOP Wavelengths** DFB: 1742.0 nm

nanoplus Distributed Feedback Lasers **(DFB)** are specifically designed for high-precision gas detection using tunable diode laser absorption spectroscopy **(TDLAS)**. Our devices operate **reliably** in more than 50,000 installations worldwide. For 25 years nanoplus has set the standard for DFB laser technology and is the only manufacturer routinely providing DFB lasers at **any wavelength**.

## **Key features:**

- MONOMODE
- CONTINUOUS WAVE
- ROOM TEMPERATURE
- MODE HOP FREE TUNING

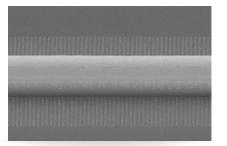

Overgrowth-free DFB device processing

Any **custom wavelength** is possible: You tell us what you need and we deliver it. With our patented DFB technology we design any wavelength **between 760 nm and 14 μm.** 

Our excellent **spectral purity** is characterized by a large side mode suppression ratio **(SMSR)** of **> 35 dB**, giving your system a low signal to noise ratio against crossinterference.

A **narrow linewidth below 3 MHz** guarantees ultra-precise scanning of the absorption line feature. The **high output power** of **several mW** yields a stronger signal and increases your measurement precision.

## Fast and wide wavelength


**tuning** is required for in situ systems. Most customers use a scan rate of 10 kHz and benefit from our very **large tuning coefficient.** 

## "Do not change your ideas, let us deliver the laser that fits your application."

We offer **various packaging options**, e.g. several free space housings including TEC and NTC, fiber coupling, **collimation** and **custom designs**. What do you require?

If you require **custom specifications**, please contact us. Nearly 80 % of our devices are more or less customer-specific. As nanoplus is a **fully vertically integrated company**, we control the entire process chain from design to packaging. Both nanoplus production facilities are based in **Germany**. To guarantee consistent product quality we apply a strict and **ISO certified quality management system** at all levels.

Our sales and R&D teams have long-standing experience in developing lasers. They will advise you in your design and realization phase as well as after-sales: **We make market leaders!** 

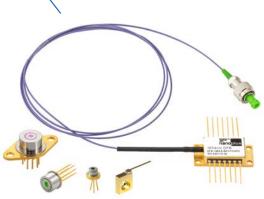

nanoplus DFB lasers on TO66, TO5, TO5.6, c-mount and SM-BTF

#### TOP WAVELENGTH

	760.8 nm
_	1278.8 nm
	1392.0 nm
	1512.2 nm
	1560 - 1590
_	1651 & 1654

## 1742.0 nm

1854 & 1877 nm

۱m

nm

- 2004.0 nm

2330 & 2334 nm

- 3240 & 3270 nm
- 3345 & 3375 nm

4524 & 4534 nm











### Nanosystems and Technologies GmbH Nanoplus

# Superior Specifications: 1742.0 nm



This data sheet reports performance data of a **sample nanoplus DFB laser at 1742.0 nm with enhanced specifications.** Standard specifications are available at: <u>nanoplus.com/DFB/1650nm-1850nm</u>. These lasers are particularly suitable for hydrogen chloride (HCl) detection.

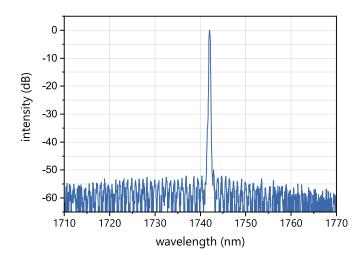

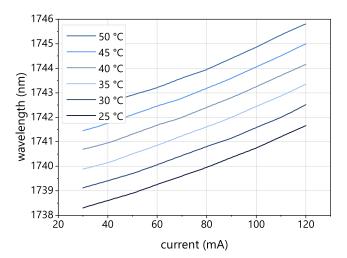

Typical room temperature cw spectrum

of a nanoplus DFB laser at 1742.0 nm

Typical mode hop free tuning of a nanoplus DFB laser at 1742.0 nm by current and temperature

electro-optical characteristics	symbol	unit	min.	typical	max.
operating wavelength (at $T_{_{\mathrm{op}}},I_{_{\mathrm{op}}}$ )	$\lambda_{_{op}}$	nm		1742.0	
optical output power (at $\lambda_{_{op}}$ )	P <sub>op</sub>	mW		5	
operating current	I <sub>op</sub>	mA		70	
operating voltage	V <sub>op</sub>	V		2	
threshold current	I <sub>th</sub>	mA	10	25	30
side mode suppression ratio	SMSR	dB		> 35	
current tuning coefficient	C,	nm / mA	0.008	0.02	0.03
temperature tuning coefficient	C <sub>T</sub>	nm / K	0.07	0.10	0.14
operating chip temperature	T <sub>op</sub>	°C	+20	+25	+50
operating case temperature*	T <sub>c</sub>	°C	-20	+25	+50
storage temperature*	Τ <sub>s</sub>	°C	-40	+20	+80

## packaging

TO5 with TEC and NTC, black cap, AR coated window TO56 without TEC or NTC, sealed, window c-mount without TEC or NTC butterfly package with TEC and NTC, SM or PM fiber, FC/APC connector chip on carrier without TEC, with NTC

Technical drawings & accessories are available at: nanoplus.com/packaging

Please contact <u>sales@nanoplus.com</u> for customized specifications, quotes and further questions. Visit our website for technical notes, application samples or literature referrals. nanoplus Nanosystems and Technologies GmbH, www.nanoplus.com, phone: +49 (0) 3693 50 5000-0, email: sales@nanoplus.com \*copyright nanoplus Nanosystems and Technologies GmbH 2023, all rights reserved. Technical data is subject to change without notice. \* non-condensing