


TOP Wavelengths


DFB: 4524 nm & 4534 nm

nanoplus Distributed Feedback Lasers (**DFB**) are specifically designed for high-precision gas detection using tunable diode laser absorption spectroscopy (**TDLAS**). Our devices operate **reliably** in more than 50,000 installations worldwide. For 25 years nanoplus has set the standard for DFB laser technology and is the only manufacturer routinely providing DFB lasers at **any wavelength**.

Key features:

- MONOMODE
- CONTINUOUS WAVE
- ROOM TEMPERATURE
- MODE HOP FREE TUNING

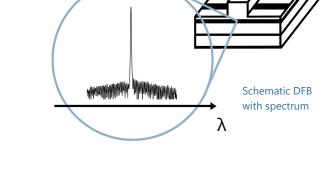

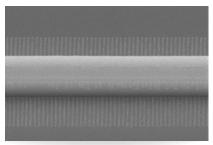

Overgrowth-free DFB device processing

Any **custom wavelength** is possible: You tell us what you need and we deliver it. With our patented DFB technology we design any wavelength **between 760 nm and 14 μm.**

Our excellent **spectral purity** is characterized by a large side mode suppression ratio **(SMSR)** of > **35 dB**, giving your system a low signal to noise ratio against crossinterference.

A **narrow linewidth below 3 MHz** guarantees ultra-precise scanning of the absorption line feature. The **high output power** of **several mW** yields a stronger signal and increases your measurement precision.

Fast and wide wavelength tuning is required for in situ systems. Most customers use a scan rate of 10 kHz and benefit from our very large tuning coefficient.

"Do not change your ideas, let us deliver the laser that fits your application."

We offer **various packaging options**, e.g. several free space housings including TEC and NTC, fiber coupling, **collimation** and **custom designs**. What do you require?

If you require **custom specifications**, please contact us. Nearly 80 % of our devices are more or less customer-specific. As nanoplus is a **fully vertically integrated company**, we control the entire process chain from design to packaging. Both nanoplus production facilities are based in **Germany**. To guarantee consistent product quality we apply a strict and **ISO certified quality management system** at all levels.

TO66 with TEC and NTC, sealed with cap and AR coated window

Our sales and R&D teams have long-standing experience in developing lasers. They will advise you in your design and realization phase as well as after-sales: **We make market leaders!**



WAVELENGTH

760.8 nm

1278.8 nm

1392.0 nm

1512.2 nm

1742.0 nm

1560 - 1590 nm

1651 & 1654 nm









Superior Specifications: 4524 nm & 4534 nm







This data sheet reports performance data of a sample nanoplus DFB laser at 4524 nm with enhanced specifications.

They are equally valid for 4534 nm.

Standard specifications are available at: nanoplus.com/DFB/4000nm-4600nm.

These lasers are particularly suitable for nitrous oxide (N₂O) detection.

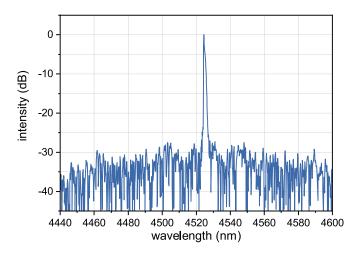

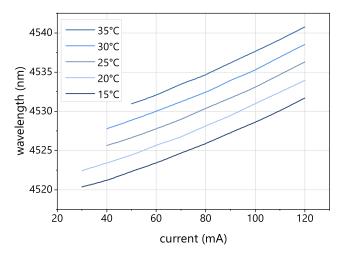

Typical room temperature cw spectrum of a nanoplus DFB ICL at 4524 nm

Typical mode hop free tuning of a nanoplus DFB ICL at 4524 nm by current and temperature

electro-optical characteristics	symbol	unit	min.	typical	max.
operating wavelength (at $T_{op'}$ I_{op})	$\lambda_{\sf op}$	nm		4524	
optical output power (at λ_{op})	P_{op}	mW		8	
operating current	l _{op}	mA			120
operating voltage	V_{op}	V		5	
threshold current	I _{th}	mA	20	30	40
side mode suppression ratio	SMSR	dB		> 35	
current tuning coefficient	C _i	nm / mA		0.12	
temperature tuning coefficient	C _T	nm / K		0.45	
operating chip temperature	T_{op}	°C	+15	+20	+40
operating case temperature*	T _c	°C	-20	+25	+55
storage temperature*	T _s	°C	-30	+20	+70

* non-condensing

packaging

TO66 with TEC and NTC, black cap, AR coated window

Other packaging options may be discussed on request.

Technical drawings & accessories are available at: nanoplus.com/packaging

Please contact <u>sales@nanoplus.com</u> for customized specifications, quotes and further questions. Visit our website for technical notes, application samples or literature referrals.